 





IT Istruzioni d'uso
EN Instructions for use
FR Notice d'emploi
DE Gebrauchsanleitung
ES Instrucciones de uso
BR-PT Instruções para uso
NL Gebruiksaanwijzing
DK Brugsanvisning
FI Käyttöohjeet
CZ Návod na použití
SK Návod na použitie
HU Használati útmutató
SL Navodila za uporabo
RU Инструкции по пользованию
TR Kullanım kılavuzu
HR/SRB/MNE/BiH Upute za uporabu
EL Οδηγίες χρήσεως
AR :تعليمات الاستخدام

book for two


1

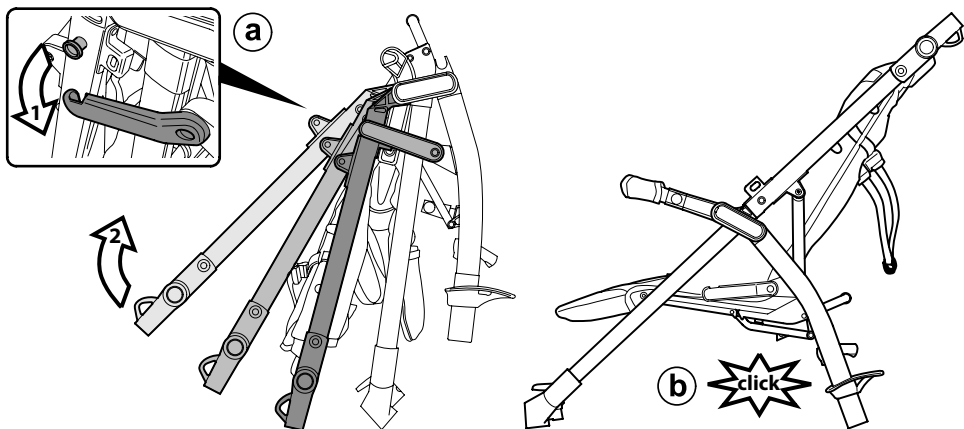



 
2

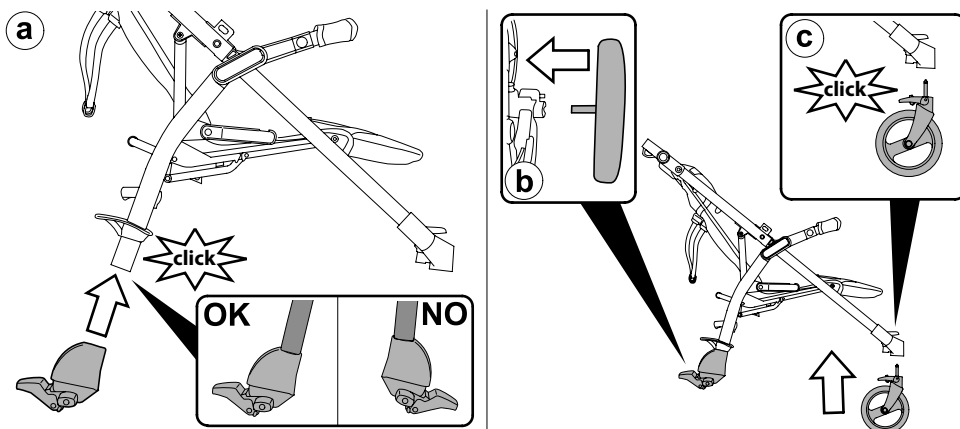









3

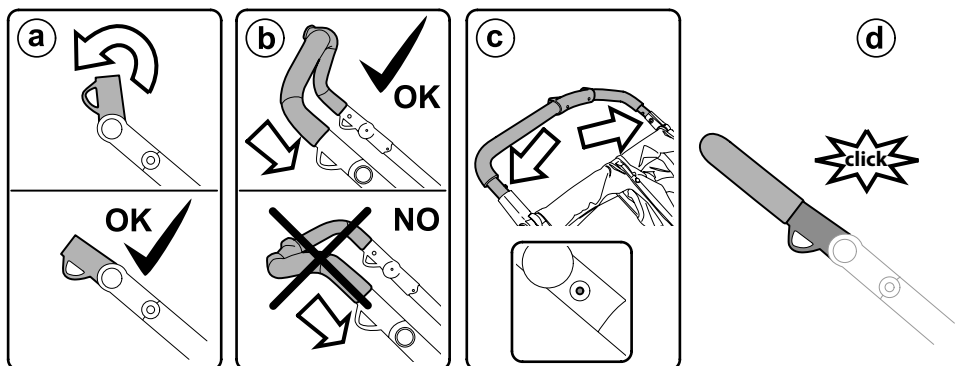 



4

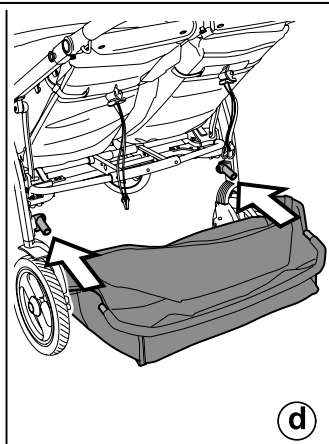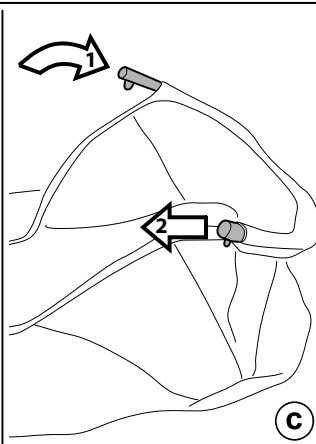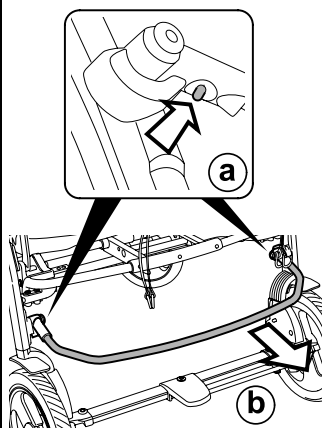   





5

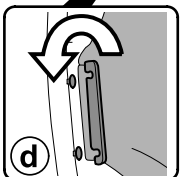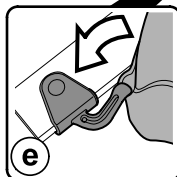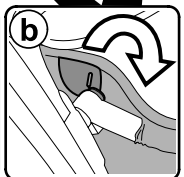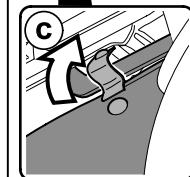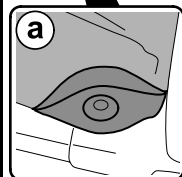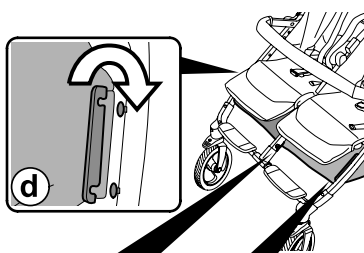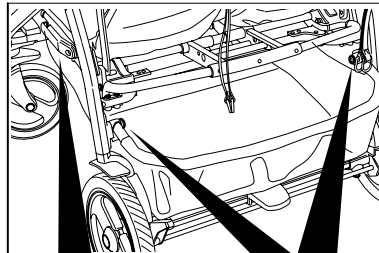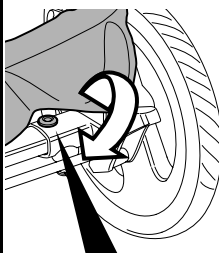        




6

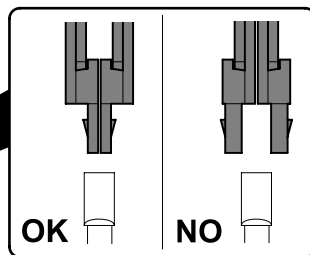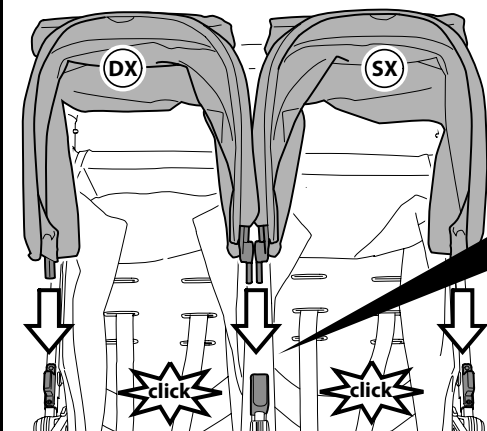  


7

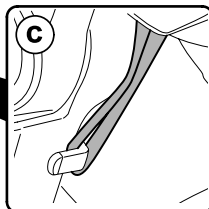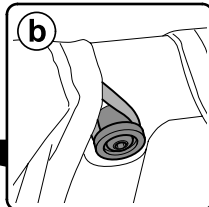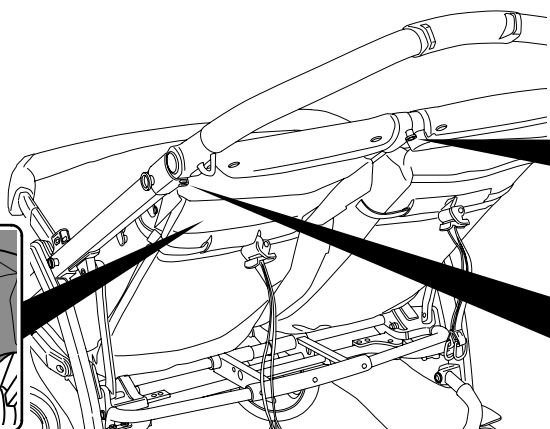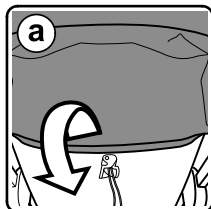    


8

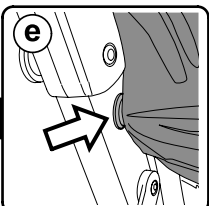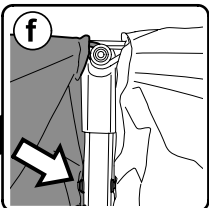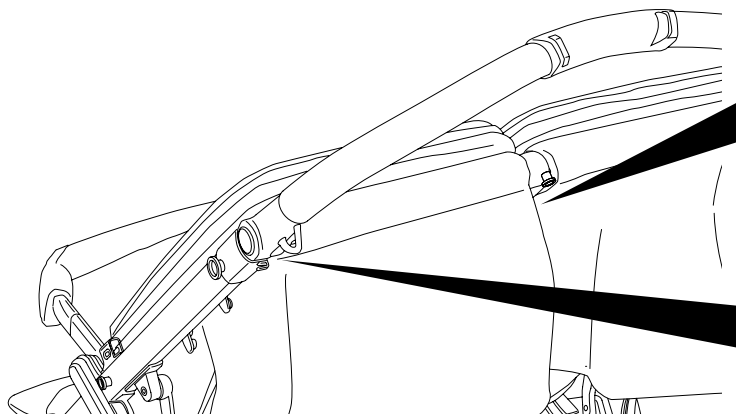   

9

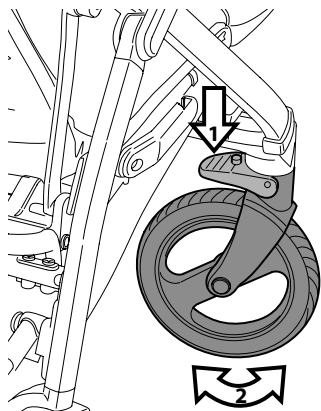 


(a)

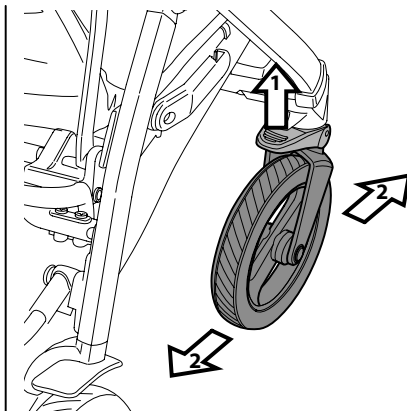 


(b)

 
10

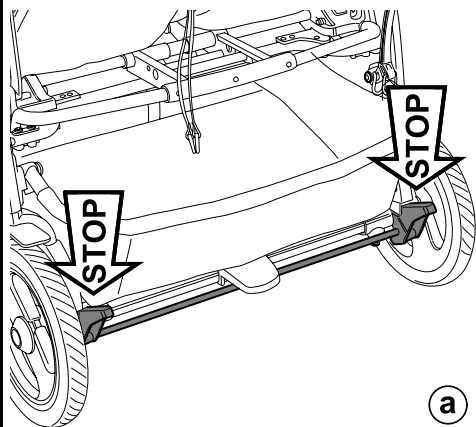

a

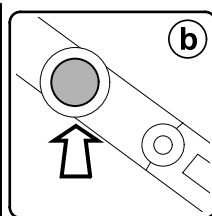 


b

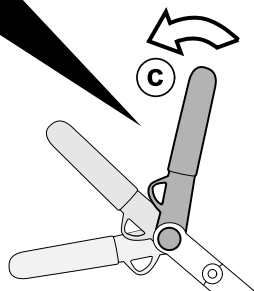 


c

 
11

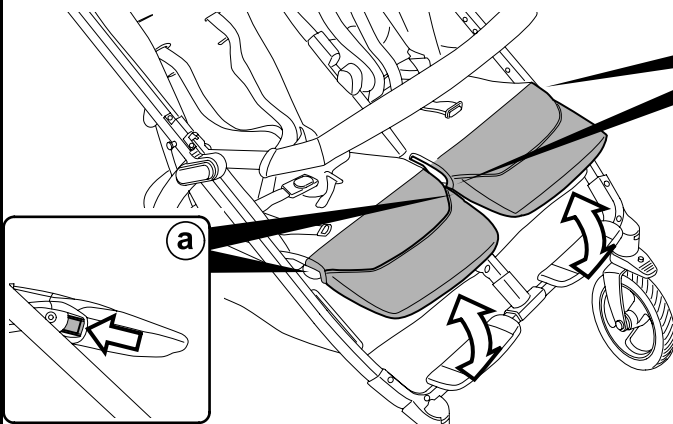

a

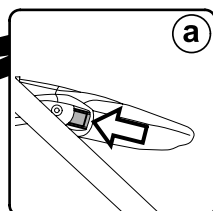 


a

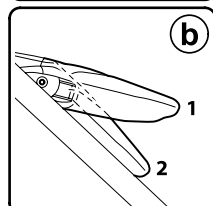 


b

 
12

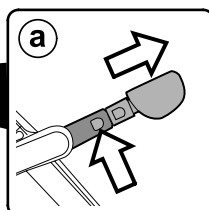

a

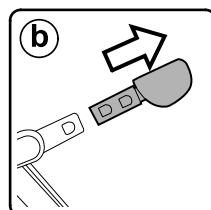 


b

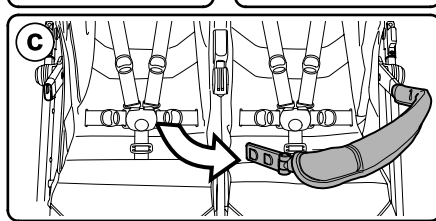 


c

 
13

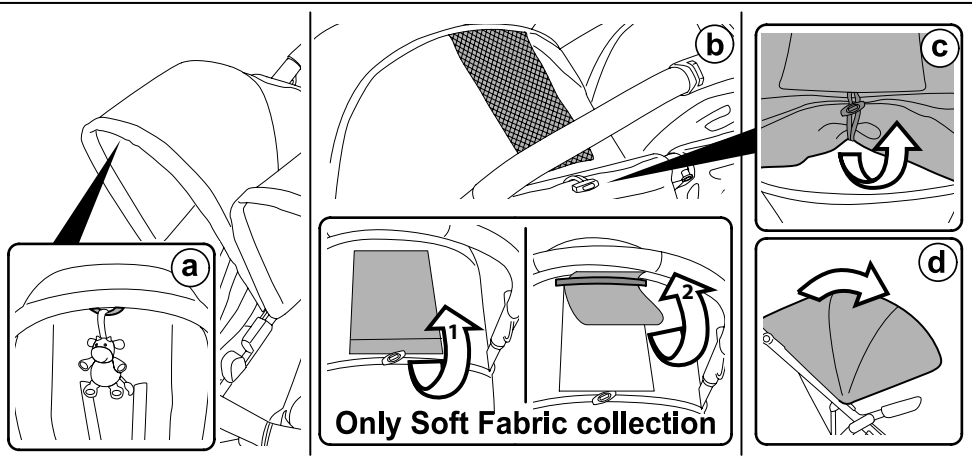


14

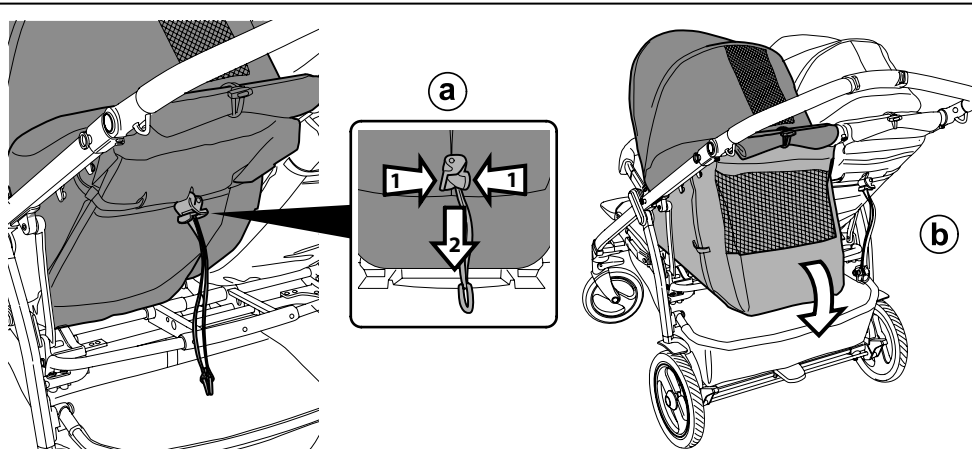 


15

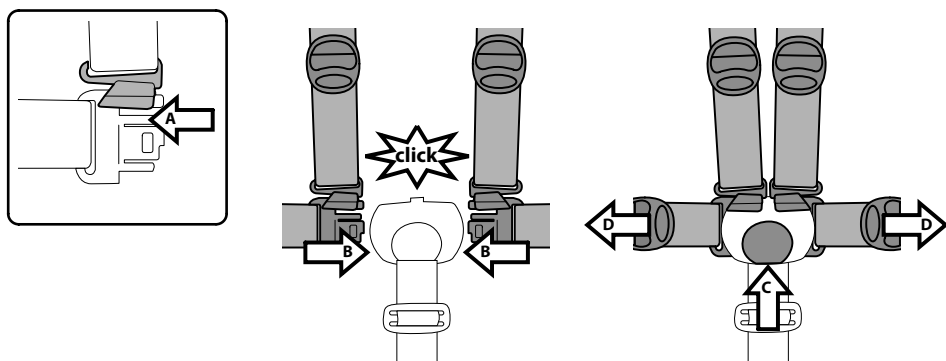 


16

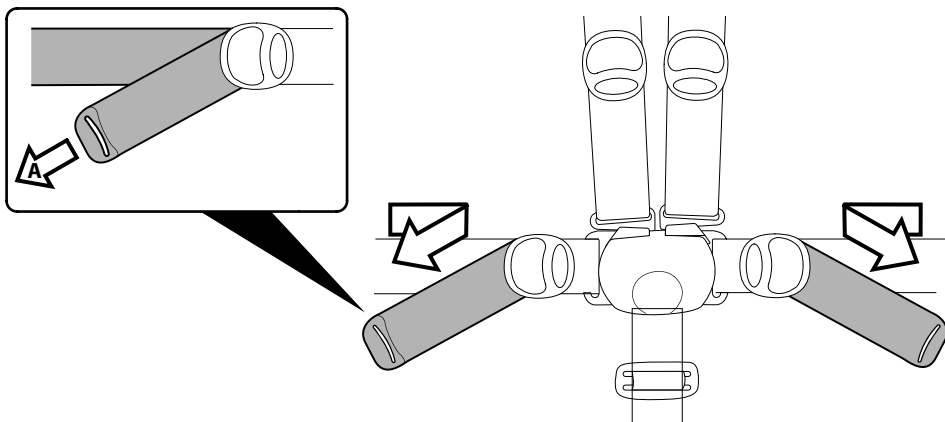 


17

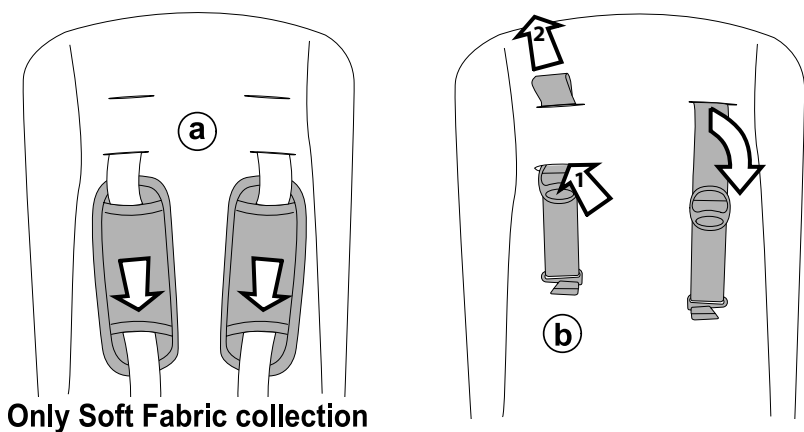 



18

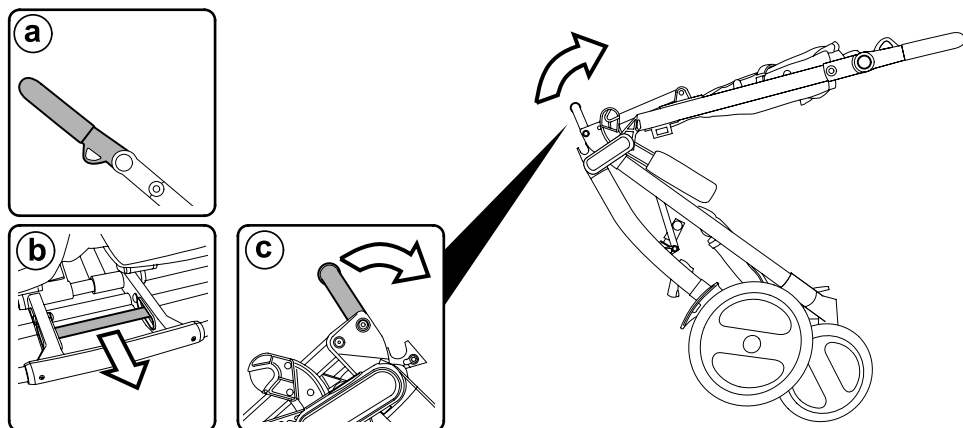 


19

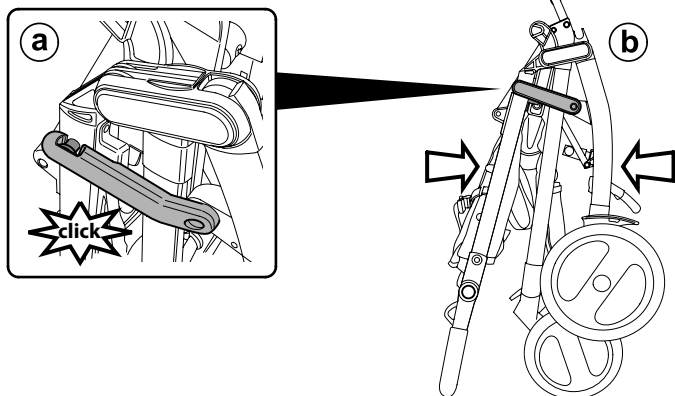 


20

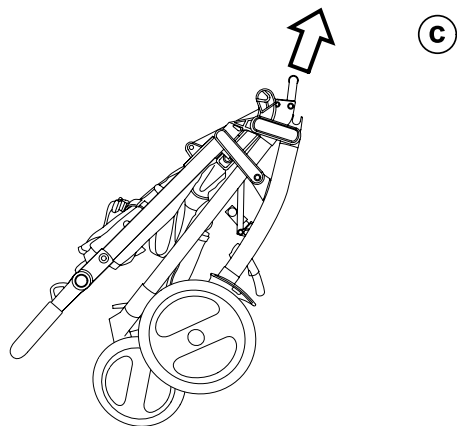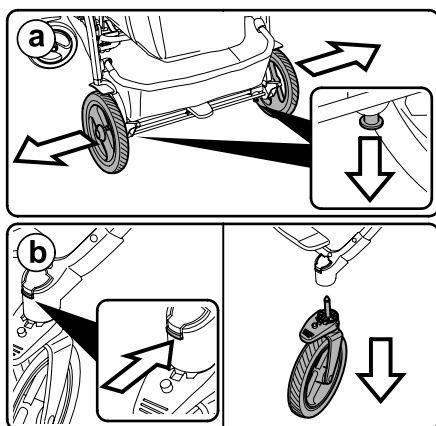  


21

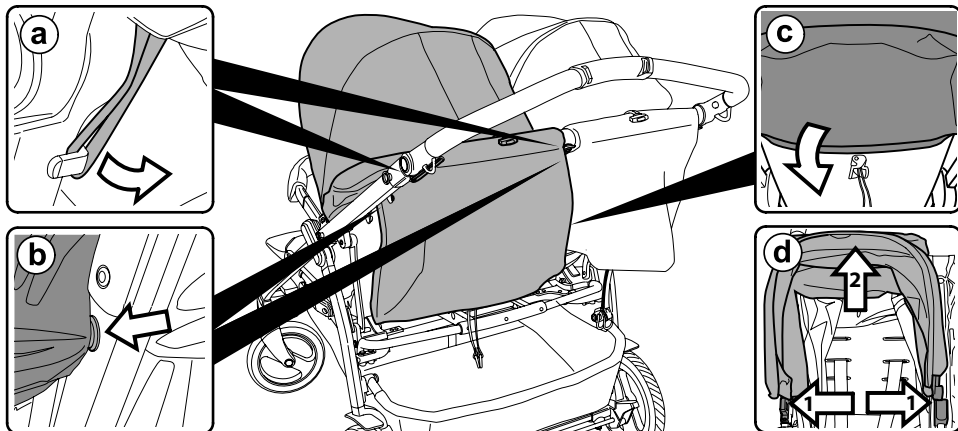 


22

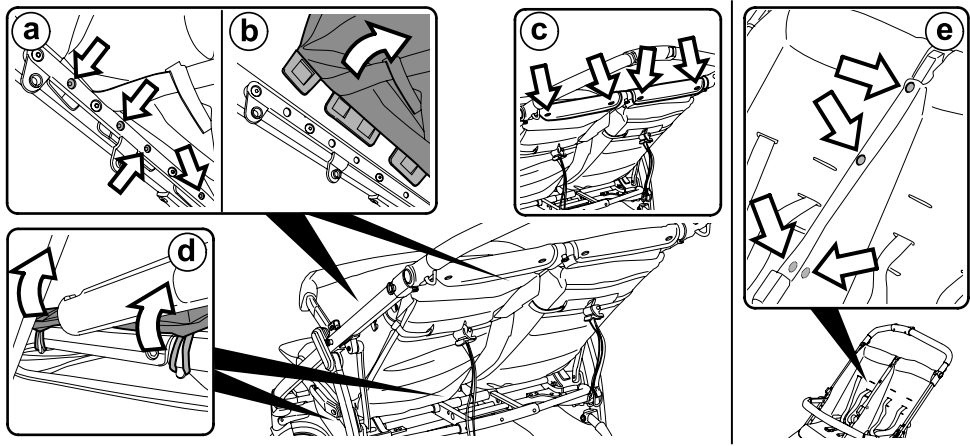 


23

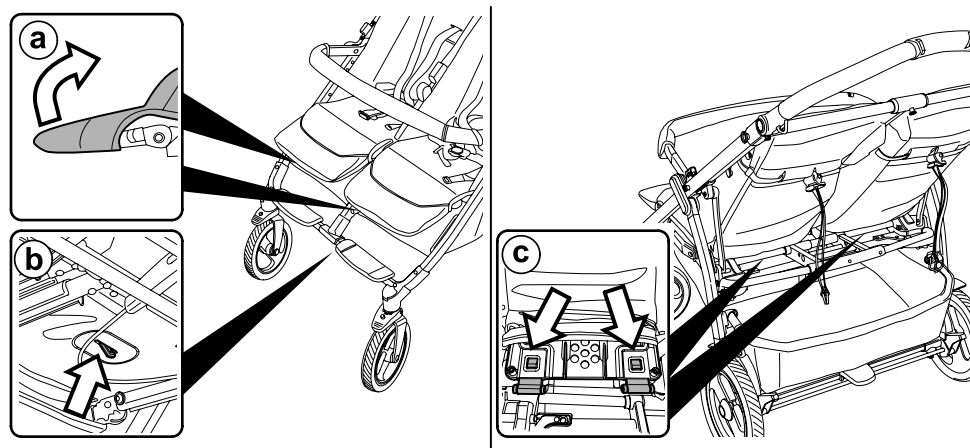 


24

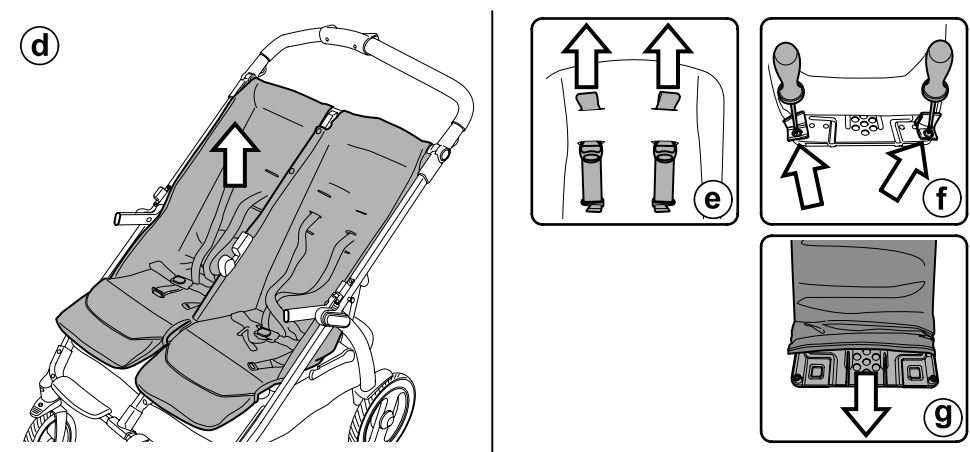 


25

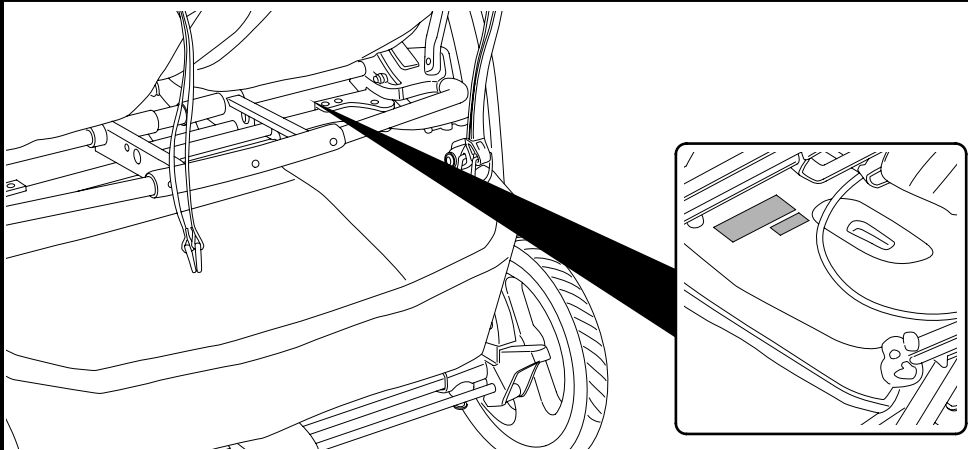 


26

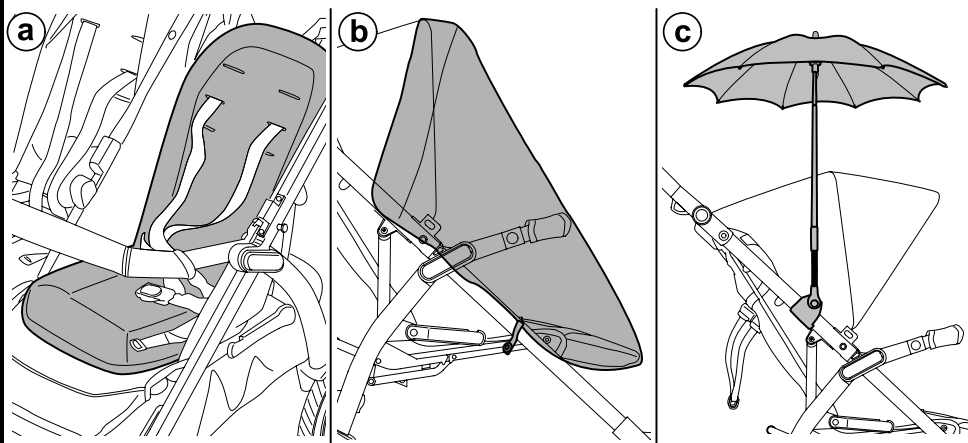 


27

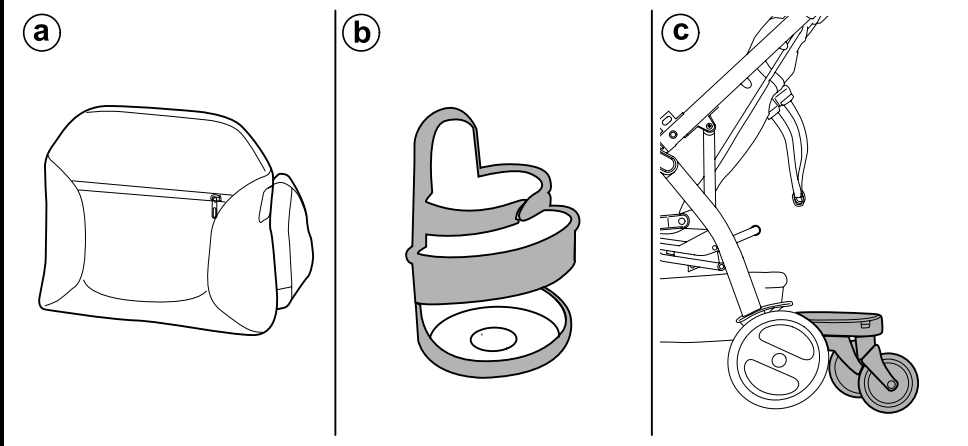 

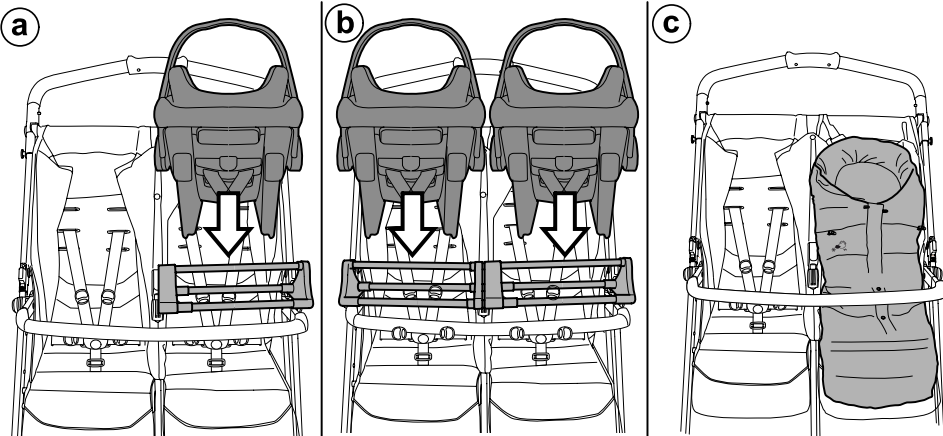 

- IT Ricambi disponibili in più colori da specificare nella richiesta.
 EN Spare parts available in different colours to be specified when ordering.
 FR Pièces de rechange disponibles en plusieurs couleurs à spécifier dans la demande.
 DE Ersatzteile in mehr Farben vorhanden, die in der Anfrage spezifiziert werden müssen.
 ES Repuestos disponibles en otros colores que se especificarán en el pedido.
 BR-PT Peças de reposição disponíveis em cores alternativas a serem especificadas no pedido.
 NL Reserveonderdelen verkrijgbaar in meerdere kleuren, bij bestelling te specificeren.
 DK Reservedele kan leveres i flere farver som bør specificeres ved bestillingen.
 FI Varaosia saatavana eri värisinä: ilmoita väri tilauksessa.
 CZ U náhradních dílů, které jsou k dispozici ve více barvách, je nutné na objednávce specifikovat příslušnou barvu.
 SK Pri náhradných dieloch, ktoré sú k dispozícii vo viacerých farbách, je potrebné pri objednávke špecifikovať želanú farbu.
 HU A tartalék alkatrészek különböző színekben elérhetők, melyeket rendeléskor kell kiválasztani.
 SL Rezervni deli so na voljo v več barvah, ki jih je treba navesti pri naročilu.
 RU Запчасти имеются различных цветов, необходимый указать в запросе.
 TR Siparişle belirtilen değişim renklerdeki yedek parçaları mevcuttur.
 HR/SRB/MNE/BiH Zamjenski dijelovi dostupni u više boja što je potrebno specificirati u narudžbi.
 EL Ανταλλακτικά διαθέσιμα σε διάφορα χρώματα. Προσδιορίστε όταν παραγγέλλετε.
 قطع غيار متاحة بأكثر من لون. وحدد في الطلبية. AR

 Book for two

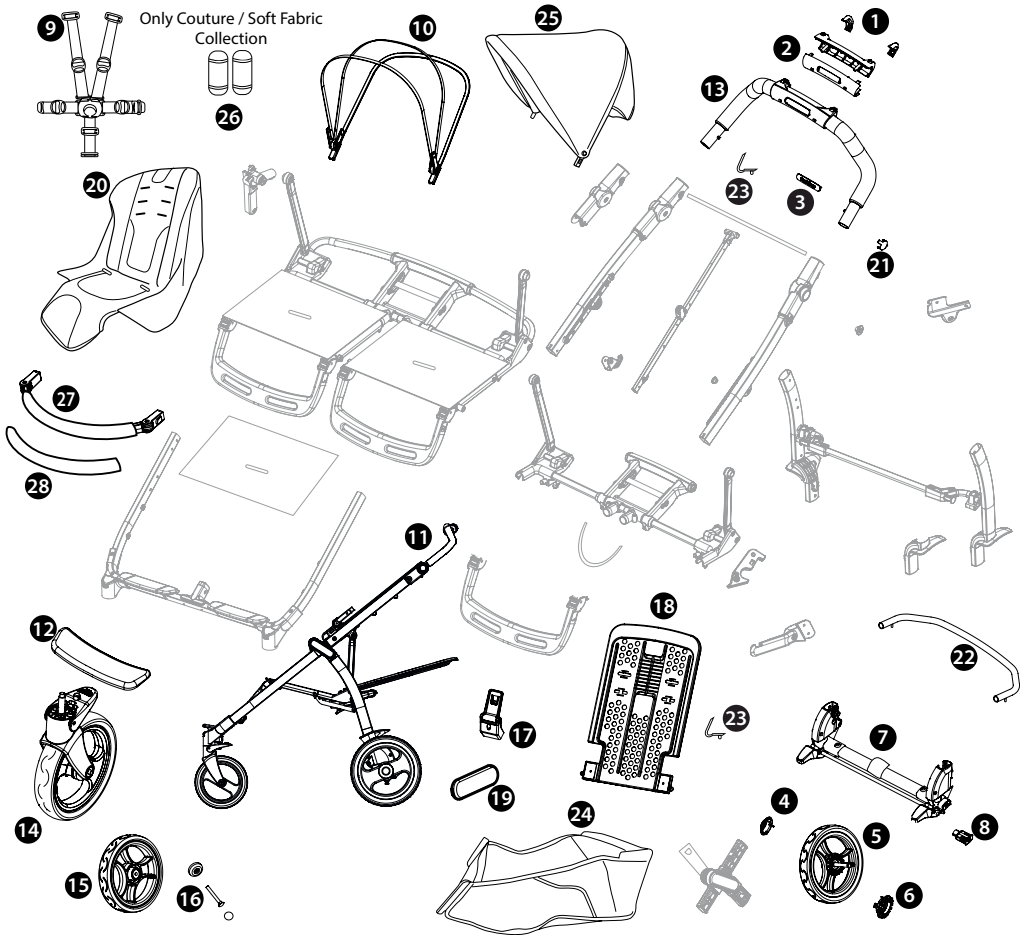

Only Couture / Soft Fabric
Collection

- | | | | | | |
|----|----------------|----|-------------------|----|---------------|
| 1 | SPST7372DN | 13 | ARPI0743N | 25 | BCAPBWD00• |
| 2 | SPST7372SN | 14 | SAPI7304JN | 26 | BCAPBW500• |
| 3 | SPST7302N | 15 | SAPI7807NN | 27 | BSPPBW00• |
| 4 | SPST7302KN | 16 | MMST0087N | 28 | SAPI7777N |
| 5 | SPST7357NPEG | | SPST7303N | | CFRPBW00--NER |
| 6 | SPST6232KN | | MMRA0007 | | |
| 7 | SAPI7255JN | | MMCA0007L30 | | |
| 8 | SPST7255N | | ARPI0744N | | |
| 9 | ARPI0742L31NGR | 17 | SPST7800N | | |
| 10 | SPST7309N | 18 | SPST7603XNPEG | | |
| 11 | MUCI5P22N | 19 | BSAPBW00• | | |
| 12 | ASPI0190DL50N | 20 | SPST7301N | | |
| 13 | ASPI0190SL50N | 21 | ASPI0189L31 | | |
| 14 | ITP0500NGPL31 | 22 | MMMQ0025D | | |
| 15 | SPST7659N | 23 | ERSHBW00-SH01RT01 | | |
| 16 | | 24 | | | |

CONSUMATORE, segnalando eventuali osservazioni o suggerimenti, che troverà nel nostro sito internet: www.pegperego.com

SERVIZIO ASSISTENZA PEG-PÉREGO

Se fortuitamente parti del modello vengono perse o danneggiate, usare solo pezzi di ricambio originali Peg Pérego. Per eventuali riparazioni, sostituzioni, informazioni sui prodotti, vendita di ricambi originali e accessori, contatta il Servizio Assistenza Peg Pérego indicando, qualora fosse presente, il numero seriale del prodotto.

tel. 0039/039/60.88.213 numero verde: 800/147.414 (contattabile da rete fissa)

fax 0039/039/33.09.992

e-mail assistenza@pegperego.it

sito internet www.pegperego.com

EN_English



WARNING!

- **IMPORTANT: Keep these instructions for future reference. Read and keep them for safety use. The child's safety could be at risk if these instructions are not followed.**
- This item was designed for the transport of 2 children in the seat.
- Do not use this product for a number of occupants greater than that intended by the manufacturer.
- This product is approved for children from birth up to a weight of 15 kg in the seat.
- For new born babies is recommended to use the backrest in the most reclined position.
- This product is designed to be used with Ganciomatic Peg-Perego products: Book For Two + "Primo Viaggio SL" (group 0+) car seat, suitable for children from birth to 13 kg.
- When used in combination with car seat (0+ group), this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.
- **WARNING!** Ensure that all the locking devices are engaged before use.
- Check that the Peg Perego Ganciomatic products are correctly fixed to the item.
- **WARNING!** Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- **WARNING!** Always use the restraint system. Always use the harness crotch strap in combination with the waist strap.
- **WARNING!** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING!** This product is not a toy. Do not let your child play with this product.
- **WARNING!** The assembly and preparation of the product must be carried out by an adult.
- Do not use this product if there are parts missing or signs of breakage.
- **WARNING!** Never leave your child unattended.
- Always apply the brake when stationary.
- Do not insert fingers into the mechanisms.
- Be careful not to hurt the child when adjusting the mechanisms (handlebar, backrest ...).
- Any weights hanging on the handlebar or handles could make the item unstable; follow the manufacturer's instructions regards the maximum loads transportable.
- The front bar (if present) is not designed to support the child's weight. It is not designed to keep the child in the seat and does not substitute for the waist belt.
- Do not load the baskets over 5Kg. Do not put weight in the cup holder (if present) in excess of those indicated on the cup holders themselves and never hot drinks. Do not put loads of more than 0.2 Kg in the hood pockets (if present).
- Do not use the product near to stairs or steps, heat sources, naked flames or dangerous objects within reach of the child.
- Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.
- **WARNING!** Don't use the rain cover (if present) on a product without a hood or parasol that can hold it. Always use the rain cover only under adult supervision. Don't use the rain cover indoors and check to ensure the child is not too warm; do not park the vehicle close to heat sources and keep well away from the lighted cigarettes. Ensure that the rain cover is not interfering with any moving parts of the carriage/stroller. Always remove the rain cover before folding your carriage/stroller.
- **WARNING!** This product is not suitable for running or skating.

- Always apply the brake when loading or unloading children.
- **WARNING!** Do not add any mattress or not approved by the manufacturer.
- Do not use accessories which are not approved by the manufacturer.

COMPONENTS OF THE ITEM

Check the contents of the packaging and if you have any complaints please contact the Assistance Service.

- The Book for two pushchair features: a basket, 2 rear wheels, 2 front wheels, handlebar, front bar, hood, rear wheel crosspiece

INSTRUCTIONS

- 1 **OPENING:** Before opening the frame, remove (without using blades) any die-cut cardboard.

WARNING:

- **DO NOT PULL OR FORCE THE FASTENER BEYOND ITS LIMIT.**
- **DO NOT USE THE FASTENER AS A CARRY HANDLE OR TO CARRY WEIGHTS.**
- **DO NOT HANG BAGS OR OTHER ACCESSORIES TO THIS FEATURE.**

Press down the side fastener, hold the upper section of the handle and rotate it towards you until the frame is fully opened (fig_a). Open frame (fig_b).

The frame is properly opened when the attachment on the base clicks into place, as shown.

- 2 **FITTING THE WHEELS:** Slot the uprights into the rear wheel crosspiece (fig_a), ensuring that it is facing the right way, then push the rear wheels on and make sure that they click into place (fig_b). To mount the front wheels, fit them into the uprights until they lock into place (fig_c).

- 3 **ATTACHING THE MAIN HANDLE:** if the handle tube faces upwards, align it with the stroller (Fig_a). Fasten the handle to the frame as shown in the figure (Fig_b).

To complete the operation, press the two side buttons on the handle (Fig_c) to ensure the handle pushes in all the way, until it clicks into place (Fig_d).

- 4 **FITTING THE BASKET:** if lowered, lift the basket tube to the horizontal position. Press the silver buttons under the metal basket tube located at the back of the stroller (fig_a) and remove the metal tube (fig_b). Thread the tube through the fabric loop on the back of the basket, making sure that the two silver buttons are facing downward (fig_c). Re-attach the tube to the housings (fig_d).

- 5 **IMPORTANT!** Fasten the three lower basket loops to the three grey buttons on the rear bar. Note that the loops open (fig_a).

Secure the two upper basket vinyl eyelets to the two grey buttons on either side of the metal tube housing.

Note that the loops open (fig_b). Fasten the two Velcro straps to the sides of the frame (fig_c).

WARNING! If this operation is not completed properly, the basket will not support any weight.

Fix the front flaps of the basket onto the frame's grey buttons (fig_d) and slip the central slot onto the frame's hook (fig_e).

- 6 **HOOD:** to apply the hoods, place the attachments in their seats (matching left and right) until they click.

- 7 Fasten the Velcro strip on the rear of the backrest (fig_a), secure the central rubber band (fig_b) and the side rubber band (fig_c).

- 8 Button laterally (fig_e) and centrally (fig_f) the two buttons to the frame.

- 9 **SWIVEL WHEELS** Lower the lever to release the front wheels (swivel position) (fig_a). Lift the lever to fix the front wheels (fig_b). The rear wheels are fixed.

- 10 Press the lever down to apply the brake and lock the frame. Do the opposite to release the brake (fig_a)
- ADJUSTABLE HANDLEBAR:** To adjust the height of the handlebar, press both of the side buttons at the same time (fig_b) and swing it into the desired position (fig_c), then release the buttons.

- 11 **FOOTREST:** before adjusting the foot rest, ensure its cover is accurately fitted; if it isn't, fit it accordingly. To lower the footrest push the two levers downwards and then push the footrest downwards (fig_a); to raise the footrest lift it upwards (fig_b).

- 12 **FRONT BAR:** to remove the front bar, pull it out to the second position (fig_a) and remove (fig_b). Open-close front bar: remove it from one side and rotate (fig_c).

- 13 **HOOD:** The hood comes with a loop for hanging your child's favorite toy (fig_a) and a see-through window for observing your child (fig_b), which can be lifted and fastened. You can detach the Velcro, roll up the back of the hood and fasten it at the top with the rubber band to allow greater ventilation during use with the backrest down (fig_c). The hood may be pulled forward into several positions (fig_d).

- 14 **ADJUSTING THE BACKREST:** to lower the backrest press the clip (fig_a) and the backrest will move down to the desired position (fig_b).

To raise the backrest, press the clip and lift the backrest to the desired height.

- 15 **FIVE POINT SAFETY HARNESS:** To fasten it, push the two waist strap buckles (with the shoulder straps attached – arrow_a) into the leg divider until they click into place (arrow_b). To unfasten it, press the round button in the centre of the buckle (arrow_c) and pull the waist straps out (arrow_d).

- 16 To tighten the waist strap, pull on both sides in the direction of the arrow (arrow_a). To loosen it, move it in the opposite direction.

- 17 Before adjusting the height of the safety harness remove the shoulder pads (fig_a). To adjust the height, slip the belts through the eyelet in the fabric (fig_b) and position them in the most suitable eyelet.

- 18 **FOLDING UP** To fold up the stroller you must ensure the front wheels are fixed and the hood are closed, when fastened. Place the handle as shown in the figure (fig_a). Pull the inside handle on the base (fig_b) and lift it (fig_c); the handle will drop forward until the frame is closed.

- 19 To close correctly, check the side hook is inserted (fig_a). If not automatically locked, compress the chassis slightly. When folded, the stroller will free standing (fig_b).

- 20 For greater compactness, it is possible to remove the wheels.

To remove the rear wheels: pull the pivot outwards and remove the wheel as shown in the figure (fig_a).

To remove the front wheels: press the tab as shown and remove the wheel (fig_b).

TRANSPORT: the stroller can be carried comfortably locking the front wheels and grasping the main handle (fig_c).

- 21 **REMOVABLE ITEMS:** to remove the hood, take the central and outer elastic off from the attachments under the handlebar (fig_a), unbutton the side and central buttons from the frame (fig_b), remove the Velcro strips from the backrest (fig_c) and remove the hood attachments from their position on the frame, pressing on the inner tabs (fig_d).

- 22 To remove the soft cover, press in the holes on the inside of the frame (fig_a); remove, from the side of the seat, the rigid flap of the soft cover (fig_b), unbutton the four buttons under the handlebar (fig_c) and unfasten the elastics under the seats (fig_d). Detach the two central buttons and the two side buttons visible from under the soft cover (fig_e).

- 23 From the front, remove the soft cover from the footrest (fig_a), remove the leg divider strap from under the seat (fig_b), and remove the backrest from the frame (fig_c).

- 24 Remove the soft cover from the frame (fig_d), remove the safety belts (fig_e), unscrew the two screws from the safety belts using a screwdriver (fig_f) and then remove the backrest (fig_g). Do the opposite to replace the soft cover.

SERIAL NUMBERS

- 25 Information about the production date can be found on the Book for Two.
_ The product name, production date and serial number of the chassis.
This information is required for any complaints.

ACCESSORIES

- 26 **BABY CUSHION:** For Peg Perego high chairs and strollers. Winter side of quilted jersey fabric, summer side of 100% cotton (fig_a).
RAIN CANOPY: can be applied to the hood (fig. b)
PARASOL: practical matching umbrella (fig_c)
27 **BAG:** a large bag with a mat to change the baby on (fig_a).
CUP HOLDER: may be fastened to the mushroom button on the frame (fig_b).
BOOK BOARD: Rear footrest plus two handlebar extensions (fig_c).
28 **ADAPTER BOOK FOR TWO_1 CAR SEAT:** Adapter Book For Two for 1 Car Seat (fig_a).
ADAPTER BOOK FOR TWO_2 CAR SEAT: Adapter Book For Two for 2 Car Seats (fig_b)
VARIO FOOT MUFF: Foot muff for Peg Perego strollers (fig_c).

CLEANING AND MAINTENANCE

PRODUCT MAINTENANCE: protect from the weather: water, rain, or snow; prolonged and continuous exposure to bright sunlight may give rise to colour changes of various different materials; store this product in a dry place.

CLEANING THE SEAT: periodically clean all plastic parts with a damp cloth. Do not use solvent or similar cleaning products; keep all metal parts dry to prevent rusting; keep moving parts clean (adjustment mechanisms, locking mechanisms, wheels, ...) and free of dust and sand and, if necessary, lubricate with light machine oil.

CLEANING THE RAIN CANOPY: wash with a sponge and soapy water; do not use detergents.

CLEANING FABRIC PARTS: brush fabric parts to remove dust and wash by hand at a maximum temperature of 30°C; do not wring; do not use chlorine bleach, do not iron; do not dry clean; do not apply solvent-based stain removers and do not dry in a tumble dryer.



PEG-PÉREGO S.p.A.



Peg-Pérego S.p.A. is an ISO 9001 certified company. This certification is a guarantee for customers and consumers of the transparency and trustworthiness of the company's procedures and working methods.

Peg Pérego can make changes at any time to the models described in this publication for technical or commercial reasons.

Peg Pérego is at the disposal of its customers and consumers to ensure that all their demands and queries are fully satisfied. It is a key part of our policy to ensure we are always aware of our customers' views and requirements. We would therefore be very grateful if, after using a Peg Pérego product, you take the time to fill in our CUSTOMER SATISFACTION QUESTIONNAIRE, making a note of any comments or suggestions you might have. You can find the questionnaire on the Peg Pérego website: www.pegperego.com

PEG-PÉREGO AFTER-SALES SERVICE

If any parts of your Peg Pérego product should be accidentally mislaid or damaged, use exclusively genuine original Peg Pérego replacements. For any repairs, replacements, product information, and orders for genuine original replacement parts and accessories,

please contact Peg Perego After Sales Service indicating the product serial number, if any.
tel. 0039/039/60.88.213 fax 0039/039/33.09.992
e-mail assistenza@pegperego.it
website www.pegperego.com

PEG PEREGO S.p.A.

VIA DE GASPERI 50 20862 ARCORE MB ITALIA
tel. 0039 039 60881 fax 0039 039 615869/616454

Servizio Post Vendita - After Sale:

tel. 0039 039 6088213 fax: 0039 039 3309992



PEG PEREGO U.S.A. Inc.

3625 INDEPENDENCE DRIVE FORT WAYNE INDIANA 46808
phone 260 482 8191 fax 260 484 2940

Call us toll free: 1 800 671 1701

PEG PEREGO CANADA Inc.

585 GRANITE COURT PICKERING ONTARIO CANADA L1W3K1
phone 905 839 3371 fax 905 839 9542

Call us toll free: 1 800 661 5050

www.pegperego.com

Tutti i diritti di proprietà intellettuale relativi ai contenuti di questo manuale d'istruzione appartengono a PEG PEREGO S.p.A. e sono tutelati dalle leggi vigenti.

All of the intellectual property rights for the contents of this instruction manual belong to PEG PEREGO S.p.A. and are protected by the laws in force.



book for two